

The absorption refrigerator as a thermal transformer

F. Herrmann, Abteilung für Didaktik der Physik, Universität, 76128 Karlsruhe

Abstract

The absorption refrigerator can be considered a thermal transformer, i.e. a device that is analogous to the electric transformer. The analogy is based on a correspondence between the extensive quantities entropy and electric charge and that of the intensive variables temperature and electric potential.

I. Introduction

It is a peculiarity of the absorption refrigerator that it is driven by a heat source unlike the compression cooling machine that is driven by an electric motor. The reason why in the following we examine the absorption refrigerator, is not its practical importance.¹ We discuss it because it is a prototypical device, in a similar sense as the Carnot engine.

One way of looking at the absorption refrigeration cycle is to compare it with the vapor compression cycle.^{2,3} Whereas in the vapor compression refrigerator a gas is compressed, in the absorption refrigerator a liquid is brought from low to high pressure which requires much less energy. Although this argument is correct, we believe that it does not entirely get the point. Just as in the case of the Carnot cycle, the description of the absorption refrigeration cycle becomes particularly simple when looking at the entropy balance. When doing so, one can see that the absorption refrigerator is the thermal analogue of the electric transformer or of the mechanical gear drive.

In section II we will introduce some tools for describing energy transport and conversion processes. In section III we will apply these tools to thermal engines. In section IV the essential aspects of the absorption refrigerator will be introduced. It will be seen that, within the machine, an entropy current is flowing from a place of high to a place of low temperature thereby “pumping” another entropy current from low to high temperature.

II. Energy and energy carriers

Whenever there is an energy flow P there is also the flow of at least one other extensive or “substance-like” quantity. According to the nature of this second substance-like quantity the energy is said to be transferred in one or the other “exchange form”, or the energy flows with one or the other “carrier.”⁴ This law or rule finds its quantitative expression in the following equations:

$$P = \phi \cdot I, \quad (\phi = \text{electric potential}, I = \text{electric current}); \quad (1)$$

$$P = \mathbf{v} \cdot \mathbf{F}, \quad (\mathbf{v} = \text{velocity}, \mathbf{F} = \text{force or momentum flow}); \quad (2)$$

$$P = \boldsymbol{\omega} \cdot \mathbf{M}, \quad (\boldsymbol{\omega} = \text{angular velocity}, \mathbf{M} = \text{torque or angular momentum flow}); \quad (3)$$

$$P = T \cdot I_S, \quad (T = \text{absolute temperature}, I_S = \text{entropy flow}); \quad (4)$$

$$P = \mu \cdot I_n, \quad (\mu = \text{chemical potential}, I_n = \text{flow of amount of substance}). \quad (5)$$

Thus, in order to describe any process we have to keep track of at least two extensive quantities: the energy and an energy carrier.⁵

The above equations suggest a pictorial representation of energy transport and conversion processes. As an example, Fig. 1 shows the flow diagram of an electric heater. The arrows or lines

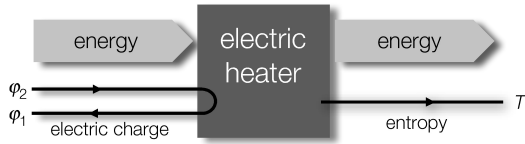


Fig. 1. Flow diagram of an electric heater.

at the left hand side refer to the incoming electric energy, those on the right hand side to the outgoing thermal energy. Since the electric charge flows in a closed circuit, we need two arrows for the electric charge and the net incoming energy flow becomes

$$P = (\phi_2 - \phi_1) \cdot I. \quad (6)$$

Here, ϕ_2 and ϕ_1 are the electric potentials of the two conductors.

In many other situations there is also an intake and an outlet for the energy carrier quantity, so that in the equation for the net energy flow a difference of the intensive variable appears. For a mechanical energy transport this can best be seen when considering that a force can be interpreted as a momentum current^{6,7} and a torque as an angular momentum current.

Table I shows five examples of such an energy transport. The similarity of the equations in the second column reflects a far-reaching analogy between the corresponding fields of science, i.e. electricity, translational and rotational mechanics, thermodynamics and chemistry.

Table I. Comparison of various energy transports.

scientific field	energy flow	example of technical realization
electricity	$P = (\phi_2 - \phi_1) \cdot I$	Energy flow through a two-core electric cable. (ϕ_2 and ϕ_1 are the electric potentials of the conductors; often one of them is equal to zero.)
translational mechanics	$P = (\mathbf{v}_2 - \mathbf{v}_1) \cdot \mathbf{F}$	Energy transmission by means of a drive belt. ($\mathbf{v}_2$ is the velocity of the drive-belt; $\mathbf{v}_1$ is the velocity of the frame of the mechanism, which often, but not necessarily, is zero.)
rotational mechanics	$P = (\omega_2 - \omega_1) \cdot \mathbf{M}$	Energy transmission by means of a driveshaft. (ω_2 is the angular velocity of the driveshaft; ω_1 is the angular velocity of the mount, which often is zero.)
thermodynamics	$P = (T_2 - T_1) \cdot I_S$	Net thermal energy flow into a heat engine. (T_2 is the temperature of the hot reservoir or the steam generator; T_1 is the temperature of the cold reservoir or the condenser.)
chemistry	$P = (\mu_2 - \mu_1) \cdot I_n$	Net chemical energy flow into a fuel cell. ⁸ (μ_2 is the total chemical potential of the substances that enter the fuel cell, e.g. that of hydrogen and oxygen; μ_1 is the chemical potential of the substances that leave the cell, e.g. water.)

III. Heat engines

We will now consider heat engines. For our purposes we can assume that they work reversibly, i.e. without entropy production. Reversibility can be achieved in principle to any degree of approximation. Fig. 2 shows the flow diagram. A thermal energy flow enters the machine on the left side, and a mechanical energy flow leaves it on the right side. Let us consider these flows separately.

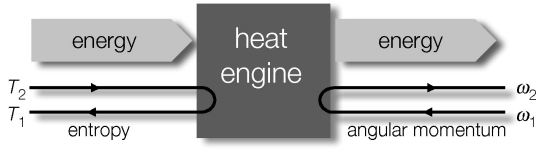


Fig. 2. Flow diagram of a heat engine.

1. An entropy current I_s enters the machine at high temperature T_2 and leaves it at low temperature T_1 . Within the machine entropy “goes down” from T_2 to T_1 .

Thereby a net thermal energy current

$$P_{\text{therm}} = (T_2 - T_1) I_s \quad (7)$$

is delivered to the machine. The energy carrier at the entrance of the machine is entropy.

2. An angular momentum current M (usually called torque) enters the machine through the foundations at angular velocity $\omega_1 = 0$ and leaves it through the driveshaft at high angular velocity ω_2 . Within the machine, angular momentum is “lifted” from ω_1 to ω_2 . Thereby a net mechanical energy current

$$P_{\text{mech}} = (\omega_2 - \omega_1) M \quad (8)$$

is delivered by the machine. The energy carrier at the exit of the machine is angular momentum.

Since the net energy inflow must equal the net outflow, we have

$$(T_2 - T_1) I_s = (\omega_2 - \omega_1) M. \quad (9)$$

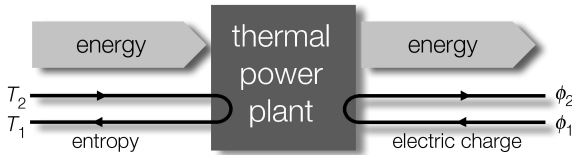


Fig. 3. Flow diagram of a thermal power plant.

Instead of considering a pure thermal engine, we can use the same argument for a thermal power plant, i.e. a thermal engine plus an electric generator. Figure 3 shows the corresponding flow diagram. Instead of Eq. (9) we now have

$$(T_2 - T_1) I_s = (\phi_2 - \phi_1) I. \quad (10)$$

Let us summarize in words what the flow diagrams of figures 2 and 3 describe pictorially: An entropy current enters the machine at a high temperature (at high “thermal potential”) and leaves it at a low temperature (at low “thermal potential”). By doing so it raises angular momentum from a low to a high angular velocity, or electric charge from low to a high electric potential, respectively.

It is seen that there is a similarity between a heat engine and a water wheel. Whereas within the heat engine entropy falls from high to low temperature in order to drive something (“to do work”), in a water wheel water goes from a greater to a smaller height, or expressed in more physical terms: Mass goes from a higher to a lower gravitational potential. The foregoing description of a heat engine, as well as the comparison with falling water, is due to Carnot.⁹

Until now nothing has been said about the realization of the thermal engine. One realization, which is possible in principle but quite inconvenient on practical grounds, has been proposed and discussed by Carnot: a cyclic process consisting of four parts, which today is called the Carnot cycle.

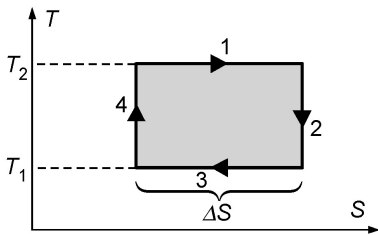


Fig. 4. T - S diagram for the Carnot cycle.

The Carnot cycle is most easily characterized by its S - T diagram, Fig. 4. According to the direction in which the cyclic process is running, the engine works as a thermal motor or as a heat pump. We describe it here working as a motor. In the first step, an amount of entropy ΔS enters the engine at high temperature T_2 . In the second step, the temperature is lowered from T_2 to T_1 , while the entropy remains constant. In the third step, the engine rejects the

entropy ΔS while the temperature remains constant. Finally, in the fourth step, temperature increases to T_2 , while the entropy is held constant.

The net amount of energy that is supplied thermally to the machine can be read from the T - S diagram: It is the area of the rectangular surface.

IV. The absorption refrigerator as a thermal transformer

A. Setup of the absorption machine

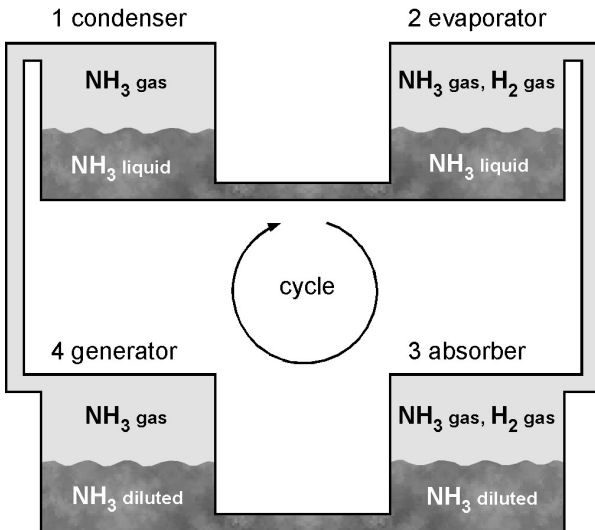


Fig. 5. Schematic arrangement of the absorption refrigerator.

The absorption refrigerator consists of four interconnected heat exchangers, Fig. 5: the condenser (1), the evaporator (2), the absorber (3) and the generator (4). The working fluid is ammonia. The ammonia flows through the four heat exchangers in the following order: condenser $\rightarrow$ evaporator $\rightarrow$ absorber $\rightarrow$ generator $\rightarrow$ condenser $\rightarrow$... The condenser and the absorber are at ambient temperature T_{amb} . The evaporator is at low temperature T_{low} and the generator at high temperature T_{high} .

Inside each of the four heat exchangers the ammonia exists in two different phases: In both the condenser and the evaporator liquid and gaseous ammonia coexist. In both the absorber and the generator there is gaseous ammonia and ammonia in hydrous solution. In addition to the ammonia, the gaseous phase in the evaporator and

in the absorber also contains hydrogen. The hydrogen does not participate in the cyclic process. It only makes sure that the total pressure in the evaporator is the same as in the condenser.

The ammonia transport from the absorber to the generator could in principle go via diffusion. Since diffusive processes are slow, the ammonia is better transferred by means of the so-called absorption circuit. The liquid ammonia-water mixture circulates in such a way that the ammonia proceeds convectively from the absorber to the generator. This liquid current is driven either by a pump or by natural convection. In our context the absorption circuit is no more than a technical trick, which accelerates the flow of the working fluid. Since we are only interested in an understanding of the basic principles of the machine, we omit the absorption circuit and assume that the ammonia transport from the absorber to the generator occurs by diffusion.

B. How the absorption machine works

We are now prepared to understand the working principle of the absorption machine. We follow a portion of ammonia, on its way through the four stations of the machine. For an understanding it is essential to consider the entropy balance: Where, and at what temperature does our portion pick up entropy, where does it reject entropy? We consider the process in a T - S diagram, Fig. 6.

We begin with the gaseous phase of the condenser. Within the condenser the gaseous ammonia portion changes into the liquid state. Since the entropy content of a given amount in the liquid phase is much lower than in the gaseous state, the ammonia has to give away entropy. This amount

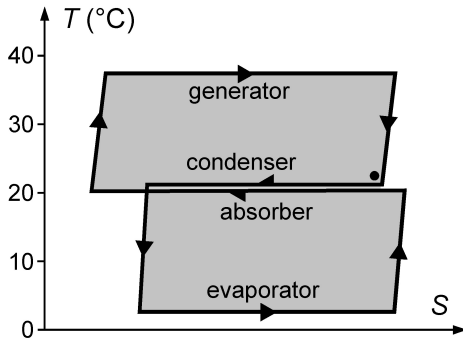


Fig. 6. T - S diagram of the absorption refrigerator. The ambient temperature is supposed to be 20 °C. The starting point of the analysis is the corner with the black dot.

of entropy $\Delta S_{\text{cond}}(T_{\text{amb}})$ leaves the machine at ambient temperature. Next, the now liquid ammonia portion proceeds to the evaporator.

Since the evaporator is at lower temperature than the condenser, our portion has to release entropy on its way from the condenser to the evaporator. We suppose that it does so via the walls of the pipe that connects both heat exchangers. Notice however, that this amount of entropy is less than 5 % of the entropy exchanged in any of the four heat exchangers and can for our purposes be neglected. In the evaporator, the ammonia portion is changing into the gaseous state again. For that purpose it needs the entropy $\Delta S_{\text{cond}}(T_{\text{low}})$. Since the evaporation entropy ΔS_{cond} does not change much with temperature we can set

$$\Delta S_{\text{cond}}(T_{\text{low}}) \approx \Delta S_{\text{ev}}(T_{\text{amb}}) = \Delta S_{\text{cond}}. \quad (11)$$

From the evaporator the ammonia portion proceeds to the absorber. Again we neglect the entropy exchange on the way. In the absorber the ammonia dissolves in the ammonia-water mixture, thereby releasing the entropy $\Delta S_{\text{solv}}(T_{\text{amb}})$, again at ambient temperature.

From the absorber, the ammonia portion proceeds to the generator, again with a small entropy exchange in the pipe. Here it transforms from the solute into the gaseous phase, thereby absorbing the entropy $\Delta S_{\text{solv}}(T_{\text{high}})$, which is only slightly different from the solution entropy $\Delta S_{\text{solv}}(T_{\text{amb}})$ at ambient temperature. We therefore can write

$$\Delta S_{\text{solv}}(T_{\text{high}}) \approx \Delta S_{\text{solv}}(T_{\text{amb}}) = \Delta S_{\text{solv}}. \quad (12)$$

After this somewhat laborious step-by-step description, let us consider the entire cycle in the T - S diagram as a whole, Fig. 6. We no longer ask what the ammonia portion is doing, we only ask for the entropy exchanges. The diagram also tells us how much entropy is exchanged in each of the four exchangers in a given interval of time. It is seen that within the machine the amount of entropy ΔS_{solv} “falls” from the high temperature T_{high} to the intermediate temperature T_{amb} while another entropy portion ΔS_{cond} is “pumped” from the low temperature T_{low} to the intermediate temperature T_{amb} .

The T - S diagram also displays the energy balance. The cycle consists of two “bubbles.” As the ammonia portion makes its complete itinerary, it passes through one of them in the positive and through the other one in the negative sense. The area of the upper bubble corresponds to the energy absorbed by the ammonia portion, the lower bubble corresponds to the rejected energy. Since the total amount of energy exchanged by the refrigerator in a given interval of time must be zero, the absolute values of the surfaces of the two bubbles must be equal, or if we attribute a negative sign to one of them, the total surface must be zero.

We now see that the absorption refrigerator displays a great similarity with the electric transformer.¹⁰ The fact that an electric transformer only works with alternating electric currents is not important in our context.

A mechanical analogue is the gearbox. An angular momentum current enters it via the entrance beam. In the gearbox, this current goes from the high angular velocity to the angular velocity 0. Simultaneously, another angular momentum current is “pumped” from a lower to a higher angular velocity. This is the current that leaves the gearbox via the exit beam. Figure 7 shows the flow diagrams of all of the three “transformers.”

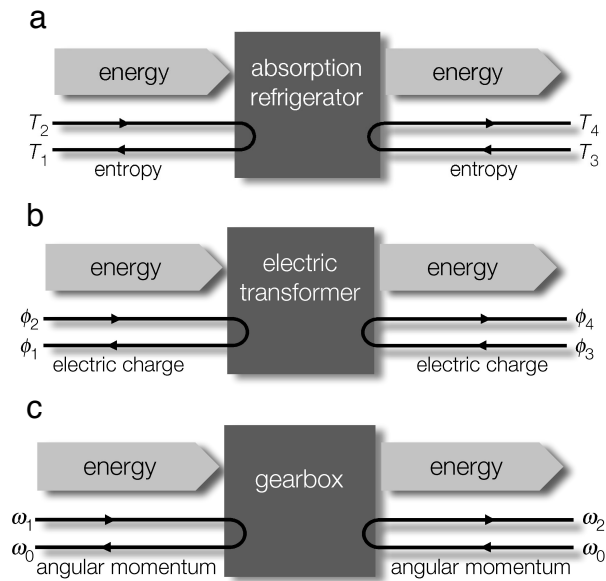


Fig. 7. Flow diagrams of (a) absorption refrigerator, (b) electric transformer and (c) gearbox.

¹Compared with the more common compression cooling machine, the absorption refrigerator has several advantages. It can run where no electric energy is available, it can use the exhaust heat from thermal engines or other industrial processes, and it does not produce noise.

²G. J. van Wylen and R. E. Sonntag, *Fundamentals of Classical Thermodynamics* (Wiley, New York, 1965), p. 288.

³J. P. Holman, *Thermodynamics* (McGraw-Hill, New York, 1969), p. 361.

⁴G. Falk, F. Herrmann and G. Bruno Schmid, "Energy forms or energy carriers?," *Am. J. Phys.* **51**, 1074-1077 (1983).

⁵In the history of physics this fact was not recognized for a long time in several instances. One example is the famous dispute about the "true measure of force" between Leibniz and the followers of the Cartesian school. Whereas according to Descartes the true measure of force was the quantity $m \cdot v$, Leibniz argued that this measure should be equal to $m \cdot v^2$. Today we know that both quantities are necessary to describe mechanical processes and we call them momentum and (apart from a factor of two) kinetic energy, respectively. Some time later the same mishap occurred with the substance-like quantities energy and entropy. Still today we can observe a tendency to explain thermal phenomena without using entropy.

⁶M. Planck, "Bemerkungen zum Prinzip der Aktion und Reaktion in der allgemeinen Dynamik", *Physikalische Zeitschrift* **23**, 828-829 (1908).

⁷F. Herrmann and G. B. Schmid, "Analogy between mechanics and electricity", *Eur. J. Phys.* **6**, 16-21 (1985).

⁸F. Herrmann and G. Job, "Chemical potential – a quantity in search of recognition", *Eur. J. Phys.* **27**, 353-371 (2006).

⁹S. Carnot, *Réflexions sur la puissance motrice du feu et sur les machines propres à développer cette puissance*, Nouvelle édition (Librairie scientifique et technique, A. Blanchard, Paris, 1953), p. 28. "D'après les notions établies jusqu'à présent, on peut comparer avec assez de justesse la puissance motrice de la chaleur à celle d'une chute d'eau [...]. La puissance motrice d'une chute d'eau dépend de sa hauteur et de la quantité du liquide; la puissance motrice de la chaleur dépend aussi de la quantité de calorique employée, et de ce qu'on pourrait nommer, de ce que nous appellerons en effet la hauteur de sa chute, c'est-à-dire de la différence de température des corps entre lesquels se fait l'échange du calorique." ("According to the concepts presently established, one can compare with much correctness the motive power of heat with that of a waterfall [...]. The motive power of a waterfall depends on its height and on the amount of the liquid; the motive power of the heat also depends on the amount of caloric that is employed, and of what one could call, and what we indeed shall call the height of its fall, i.e. the temperature of the bodies between which the exchange of the caloric is done.")

¹⁰H. Fuchs, *The Dynamics of Heat* (Springer, New York, 1996), pp. 553-554.