

Analysis Method of Strapdown Inertial Navigation Error Distribution Based on Covariance Matrix Decomposition

Xiaokang Yang, Gongmin Yan, Fan Liu, Bofan Guan, Sihai Li
School of Automation, Northwestern Polytechnical University, Xi'an, China.
E-mail: yangongmin@163.com

Abstract: Error distribution analysis is an important assistant technology for the research of SINS(Strapdown Inertial Navigation System). Error distribution result can provide the contribution of different errors to final navigation error, which is helpful for modifying and optimizing SINS. To realize decomposing the navigation error into parts that caused by each error source, the SINS error state space model is established and covariance matrix is decomposed according to error sources. The proposed error distribution analysis method based on 34-dimension SINS error model can quantitatively analyze the contribution to the end navigation error of initial errors, IMU(Inertial Measurement Unit) bias, IMU scale factor errors, mounting errors of gyroscopes and accelerometers, and IMU stochastic errors. The simulations in static condition and single axis rotation condition indicate that the distribution result of proposed analysis method accords with the law of error propagation. After trajectory determined, the corresponding error distribution result will be calculated with the proposed method. Compared with the Monte-Carlo method and other method based on covariance matrix, the proposed method uses more complete error model, considers the interaction effect of error sources and can be easily realized with less computation.

Key Words: Strapdown Inertial Navigation System, Error Distribution, Covariance Decomposition, State Space Model

1 Introduction

Error distribution is an important technology to analysis the influence of different error source to the final navigation error. After the vehicle's trajectory determined, the navigation error distribution, which can be used to guide the direction of IMU error restraint and optimize the SINS algorithm in purpose, of error sources will be worked out. The error distribution result is a one-dimensional table that contains proportion of each error source in final navigation result. Restraining the primary error source will effectively improve the navigation performance. Hence, error distribution technology of SINS is significant for the study on improving SINS accuracy.

Improving the accuracy of SINS is always one of important tasks for the study of navigation and guidance. Mainstream technology contains IMU error modeling, IMU precise calibration, revolution-modulation technology, optimizing SINS navigation algorithm etc[1–4]. For these methods, the primary error source of SINS should be determined firstly to assistant finding the best modified direction. It is difficult to improve accuracy of SINS without error distribution, because the complex SINS error model with more than 30 error sources need to be analysis and find out proper way to restrain them.

At present, the error distribution method can be divided into three kinds. The first is calculating navigation error with determined error model and trajectory data. This method is proper for short time situation with a simplified SINS error model. Zhang[5] deduced a tactical IMU error model and calculated the influence to position error from each error source. However, this method doesn't consider the coupling relationship of different errors. Petritoli[6] also study on how the error evolves over time in case of simplification of calculation. The second is Monte-Carlo simulation method, which obtain the statistic result of error distribution after lots of simulation tests. Kwon[7]

compared the simulation of common error model and the simulation of error model with gravity error to measure the influence of gravity error. Repeat tests must be finished because of the IMU stochastic error. If other errors need be analyzed, groups of Monte-Carlo simulation tests must be completed. The third is covariance matrix analysis, which use the covariance matrix of Kalman filter to obtain the error variance and distribution. Savege[8] proposed the error distribution method for integrated navigation system by modifying the updating equation of the covariance matrix. However, the corresponding error distribution analysis of high-accuracy SINS has not been seen in the literature. Weng[9] proposed an error distribution method of SINS and verified in the in-flight alignment condition. Yan[10] deduced another error distribution analysis based on covariance matrix according to the updating equation of covariance matrix of Kalman filter. It can be applied in both of pure inertial navigation system and integrated navigation system. Although the method is simple and feasible, the deduction process is so complex and tedious.

A simplified and feasible error distribution analysis technology, that is based on 34-dimension SINS error model and its linear state space model, is proposed herein. Firstly, the general SINS error model is given and rewrite it as the form of linear state space model. Then, the state vector decomposing and the updating equation of decomposed covariance matrix is deduced in detail. Finally, simulations in the static condition and single axis rotation condition were completed to analyze the contribution of each error sources include initial navigation errors, IMU constant errors and IMU stochastic errors to the final navigation errors.

2 General Error Model of SINS

Generally, the sensors measurement error of IMU like gyroscope bias ϵ , accelerometer bias ∇ , the scale factor error

matrix of gyroscope δK_g , the scale factor error matrix of accelerometer δK_a , the gravity error and the earth parameters error are all contained in the error model of SINS in the little attitude error angle condition. This accurate error model adapts to most inertial navigation situation, but a coarse and simple model is more proper for low-cost IMU system. The result similar with accurate error model will be obtained rapidly by calculating or analyzing IMU data with simplified error model.

The definition of coordinate systems used in SINS error model establishing will be given firstly: i denotes inertial frame. e denotes Earth frame. n denotes navigation frame in which x, y, z parallel with east, north and up direction. And b denotes IMU frame.

The general attitude error model is given by

$$\dot{\phi} = \phi \times \omega_{in}^n + \delta\omega_{in}^n - C_b^m \delta K_g \omega_{ib}^b - \varepsilon^n \quad (1)$$

in Eq.(1), ϕ is attitude error vector, $\omega_{in}^n = \omega_{ie}^n + \omega_{en}^n$ represents the earth rotation angular velocity and angular velocity that n frame turn to e frame. $\delta\omega_{in}^n$ is error of ω_{in}^n . C_b^m is attitude matrix from b frame to n frame. ω_{ib}^b is vehicle angular velocity.

The general velocity error model is given by

$$\delta\dot{v}^n = f_{sf}^n \times \phi + \delta g^n - (2\delta\omega_{ie}^n + \delta\omega_{en}^n) \times v^n - (2\omega_{ie}^n + \omega_{en}^n) \times \delta v^n - C_b^m \delta K_g f_{sf}^b + \nabla^n \quad (2)$$

in where δv^n is velocity error in navigation frame, f_{sf}^b is the specific force output by accelerometers, and δg^n is gravity accelerometer error.

The general position error model is given by

$$\begin{cases} \delta\dot{L} = \frac{1}{R_M + h} \delta v_N - \frac{v_N}{(R_M + h)^2} \delta h \\ \delta\dot{\lambda} = \frac{\sec L \delta v_E + v_E \sec L \tan L \delta L}{R_N + h} - \frac{v_E \sec L}{(R_N + h)^2} \delta h \\ \delta\dot{h} = \delta v_U \end{cases} \quad (3)$$

in where L, λ, h denote latitude, longitude and altitude respectively. R_M and R_N represent the meridian radius and the prime vertical radius of vehicle position respectively.

The SINS error model is composed with 3 linear differential equation, hence it can be written as matrix multiplication form, which is given by

$$\dot{X} = FX + GW \quad (4)$$

in where X is the vector composed with navigation errors and IMU errors, the definition equation of X is given by

$$X = [\phi^T \quad (\delta v^n)^T \quad p^T \quad X_{Kg_s}^T \quad X_{Ka_s}^T \quad X_{Ka_m}^T \quad (\varepsilon^b)^T \quad (\nabla^b)^T]^T \quad (5)$$

Considering the stochastic error of IMU in SINS error model, the stochastic error vector and its distribution matrix are given by

$$W = [w_{g,x}^b \quad w_{g,y}^b \quad w_{g,z}^b \quad w_{a,x}^b \quad w_{a,y}^b \quad w_{a,z}^b]^T \quad (6)$$

$$G_{INS} = \begin{bmatrix} -C_b^n & \mathbf{0}_{3 \times 3} \\ \mathbf{0}_{3 \times 3} & C_b^n \\ \mathbf{0}_{9 \times 3} & \mathbf{0}_{9 \times 3} \end{bmatrix} \quad (7)$$

The definition of each error vectors in Eq.(5) are listed as below:

$$\phi = [\phi_E \quad \phi_N \quad \phi_U]^T \quad (8a)$$

$$\delta v^n = [\delta v_E \quad \delta v_N \quad \delta v_U]^T \quad (8b)$$

$$\delta p = [\delta L \quad \delta \lambda \quad \delta h]^T \quad (8c)$$

$$X_{Kg_s} = [\delta K_g(1,1) \quad \delta K_g(2,2) \quad \delta K_g(3,3)]^T \quad (8d)$$

$$X_{Kga} = [\delta K_g(2,1) \quad \delta K_g(3,1) \quad \delta K_g(3,2)]^T \quad (8e)$$

$$X_{Kas} = [\delta K_a(1,1) \quad \delta K_a(2,2) \quad \delta K_a(3,3)]^T \quad (8f)$$

$$X_{Kaa} = [\delta K_a(1,2) \quad \delta K_a(1,3) \quad \delta K_a(2,1) \quad \delta K_a(2,3) \quad \delta K_a(3,1) \quad \delta K_a(3,2)]^T \quad (8g)$$

$$\varepsilon^b = [\varepsilon_x \quad \varepsilon_y \quad \varepsilon_z]^T \quad (8h)$$

$$\nabla^b = [\nabla_x \quad \nabla_y \quad \nabla_z]^T \quad (8i)$$

According to the error model of SINS, F in Eq.(4) is given in Eq.(9).

And some sub-matrix of F is given by

$$M_{av} = \begin{bmatrix} 0 & -1/(R_M + h) & 0 \\ 1/(R_N + h) & 0 & 0 \\ \tan L/(R_N + h) & 0 & 0 \end{bmatrix} \quad (10a)$$

$$M_2 = \begin{bmatrix} 0 & 0 & 0 \\ -\omega_{ie} \sin L & 0 & 0 \\ \omega_{ie} \cos L & 0 & 0 \end{bmatrix} \quad (10b)$$

$$M_1 = \begin{bmatrix} 0 & 0 & v_N/(R_M + h)^2 \\ 0 & 0 & -v_E/(R_N + h)^2 \\ v_E \sec^2 L/(R_N + h) & 0 & -v_E \tan L/(R_N + h)^2 \end{bmatrix} \quad (10c)$$

$$M_{ap} = M_1 + M_2 \quad (10d)$$

$$M_{vv} = (v^n \times) M_{av} + [(2\omega_{ie}^n + \omega_{en}^n) \times] \quad (10e)$$

$$M_{vp} = (v^n \times) (2M_1 + M_2) \quad (10f)$$

$$M_{aK_s} = \begin{bmatrix} \omega_{ib,x}^b & 0 & 0 \\ 0 & \omega_{ib,y}^b & 0 \\ 0 & 0 & \omega_{ib,z}^b \end{bmatrix} \quad (10g)$$

$$M_{aK_m} = \begin{bmatrix} \omega_{ib,x}^b & 0 & 0 \\ 0 & \omega_{ib,x}^b & 0 \\ 0 & 0 & \omega_{ib,y}^b \end{bmatrix} \quad (10h)$$

$$M_{vK_s} = \begin{bmatrix} f_{sf,x}^b & 0 & 0 \\ 0 & f_{sf,y}^b & 0 \\ 0 & 0 & f_{sf,z}^b \end{bmatrix} \quad (10i)$$

$$M_{vK_m} = \begin{bmatrix} f_{sf,y}^b & f_{sf,z}^b & 0 & 0 & 0 & 0 \\ 0 & 0 & f_{sf,x}^b & f_{sf,z}^b & 0 & 0 \\ 0 & 0 & 0 & 0 & f_{sf,x}^b & f_{sf,y}^b \end{bmatrix} \quad (10j)$$

$$F_{\text{INS}} = \begin{bmatrix} -\omega_{in}^n & M_{av} & M_{ap} & M_{aK_s} & M_{aK_m} & \mathbf{0}_{3 \times 3} & \mathbf{0}_{3 \times 6} & -C_b^n & \mathbf{0}_{3 \times 3} \\ f_{sf}^n \times & M_{vv} & M_{vp} & \mathbf{0}_{3 \times 3} & \mathbf{0}_{3 \times 3} & M_{vK_s} & M_{vK_m} & \mathbf{0}_{3 \times 3} & C_b^n \\ \mathbf{0}_{3 \times 3} & M_{pv} & M_{pp} & \mathbf{0}_{3 \times 3} & \mathbf{0}_{3 \times 3} & \mathbf{0}_{3 \times 3} & \mathbf{0}_{3 \times 6} & \mathbf{0}_{3 \times 3} & \mathbf{0}_{3 \times 3} \\ \mathbf{0}_{6 \times 3} & \mathbf{0}_{6 \times 3} & \mathbf{0}_{6 \times 3} & \mathbf{0}_{6 \times 3} & \mathbf{0}_{6 \times 3} & \mathbf{0}_{6 \times 3} & \mathbf{0}_{6 \times 6} & \mathbf{0}_{6 \times 3} & \mathbf{0}_{6 \times 3} \\ \mathbf{0}_{9 \times 3} & \mathbf{0}_{9 \times 3} & \mathbf{0}_{9 \times 3} & \mathbf{0}_{9 \times 3} & \mathbf{0}_{9 \times 3} & \mathbf{0}_{9 \times 3} & \mathbf{0}_{9 \times 6} & \mathbf{0}_{9 \times 3} & \mathbf{0}_{9 \times 3} \\ \mathbf{0}_{6 \times 3} & \mathbf{0}_{6 \times 3} & \mathbf{0}_{6 \times 3} & \mathbf{0}_{6 \times 3} & \mathbf{0}_{6 \times 3} & \mathbf{0}_{6 \times 3} & \mathbf{0}_{6 \times 6} & \mathbf{0}_{6 \times 3} & \mathbf{0}_{6 \times 3} \end{bmatrix} \quad (9)$$

3 Error Decomposition Method in System Updating Process

3.1 Deterministic System Error distribution

A deterministic input linear system space state model is

$$\dot{\mathbf{X}} = \mathbf{F}\mathbf{X} + \mathbf{G}\mathbf{U} \quad (11)$$

in Eq.(11), $\mathbf{X}$ is $n \times 1$ state vector, $\mathbf{F}$ is system matrix, $\mathbf{G}$ is input distribution matrix, and $\mathbf{U}$ is $m \times 1$ deterministic input vector of system. $\mathbf{X}$ is calculated only by initial state $\mathbf{X}_0$ and input vector $\mathbf{U}$, if $\mathbf{X}$ is used to represent system error of INS. The discrete model function is given by

$$\mathbf{X}_k = \Phi_{k/k-1}\mathbf{X}_{k-1} + \Gamma_{k-1}\mathbf{U}_{k-1} \quad (12)$$

in where $\mathbf{X}_k$ is the state vector at t_k , $\Phi_{k/k-1}$ is state transfer matrix from t_{k-1} to t_k , Γ_k is discrete input matrix, and $\mathbf{U}_k$ is input vector at t_k .

Assuming that the initial vector of system error(state vector) is $\mathbf{X}_0$ and the input vector series is $\mathbf{U}_0, \mathbf{U}_1, \dots, \mathbf{U}_n$, the system error updating process in the period $k = 0 \rightarrow n$ is given by

$$\begin{cases} \mathbf{X}_1 = \mathbf{X}_{1/0}\mathbf{X}_0 + \Gamma_0\mathbf{U}_0 \\ \mathbf{X}_2 = \mathbf{X}_{2/1}\mathbf{X}_1 + \Gamma_1\mathbf{U}_1 \\ \vdots \\ \mathbf{X}_n = \mathbf{X}_{n/n-1}\mathbf{X}_{n-1} + \Gamma_{n-1}\mathbf{U}_{n-1} \end{cases} \quad (13)$$

Substituting the first $n - 1$ equation in Eq.(13) into the last equation, we have

$$\begin{aligned} \mathbf{X}_n &= \Phi_{n/n-1}\mathbf{X}_{n-1} + \Gamma_{n-1}\mathbf{U}_{n-1} \\ &= \Phi_{n/n-1}(\Phi_{n-1/n-2}\mathbf{X}_{n-2} + \Gamma_{n-2}\mathbf{U}_{n-2}) + \Gamma_{n-1}\mathbf{U}_{n-1} \\ &= \Phi_{n/n-1}\Phi_{n-1/n-2}\mathbf{X}_{n-2} + \Phi_{n/n-1}\Gamma_{n-2}\mathbf{U}_{n-2} + \Gamma_{n-1}\mathbf{U}_{n-1} \\ &\dots \\ &= \prod_{i=1}^n \Phi_{i/i-1}\mathbf{X}_0 + \sum_{j=0}^{n-2} \left(\prod_{k=j}^{n-2} \Phi_{k+2/k+1} \Gamma_k \mathbf{U}_k \right) \\ &\quad + \Gamma_{n-1}\mathbf{U}_{n-1} \end{aligned} \quad (14)$$

It is clear that the state vector $\mathbf{X}_n$ at t_n is determined by initial state vector $\mathbf{X}_0$ and the input vector series from t_0 to t_{n-1} . Hence, the current state can be divided into the part caused by initial state and the part cause by input vector series.

Make state vector $\mathbf{X}_k$ be divided as

$$\mathbf{X}_k = \bar{\mathbf{X}}_k + \bar{\mathbf{U}}_k, (k = 0, 1, 2, \dots, n) \quad (15)$$

in where $\bar{\mathbf{X}}_k$ is part of state caused by initial state and $\bar{\mathbf{U}}_k$ is part of state caused by input series. The updating equations of them are given by

$$\bar{\mathbf{X}}_k = \Phi_{k/k-1}\bar{\mathbf{X}}_{k-1}, (\bar{\mathbf{X}}_0 = \mathbf{X}_0, k = 0, 1, 2, \dots, n) \quad (16)$$

$$\bar{\mathbf{U}}_k = \Phi_{k/k-1}\bar{\mathbf{U}}_{k-1} + \Gamma_{k-1}\mathbf{U}_{k-1} \quad (17)$$

Hence, when $k = n$ we have

$$\bar{\mathbf{X}}_n = \prod_{i=1}^n \Phi_{i/i-1}\bar{\mathbf{X}}_0 \quad (18)$$

$$\bar{\mathbf{U}}_n = \sum_{j=1}^{n-2} \left(\prod_{k=j}^{n-2} \Phi_{k+2/k+1} \Gamma_k \mathbf{U}_k \right) + \Gamma_{n-1}\mathbf{U}_{n-1} \quad (19)$$

And the state transfer equation in Eq.(12) is written as

$$\begin{cases} \bar{\mathbf{X}}_{k+1} = \Phi_{k+1/k}\bar{\mathbf{X}}_k \\ \bar{\mathbf{U}}_{k+1} = \Phi_{k+1/k}\bar{\mathbf{U}}_k + \Gamma_k\mathbf{U}_k \\ \mathbf{X}_{k+1} = \bar{\mathbf{X}}_{k+1} + \bar{\mathbf{U}}_{k+1} \end{cases} \begin{cases} \bar{\mathbf{X}}_0 = \mathbf{X}_0 \\ \bar{\mathbf{U}}_0 = \mathbf{0} \\ k = 0, 1, \dots, n-1 \end{cases} \quad (20)$$

Eq.(20) indicates that the updating process of system state can be divided into the initial state updating and input vector updating. Hence, the proportion in current state vector of initial state and input vectors is obtained easily with the updating equation in Eq.(20). However, the proportion of each element of initial vector and input vector still cannot be obtained. The further decomposition of Eq.(11) should be executed.

If decomposing the state vector $\mathbf{X}_k$ as a series of vector $\mathbf{X}_{k,(i)}$, which represents the part of current state caused by the state element in the i -th row after system updating. $\mathbf{X}_k$ will become

$$\bar{\mathbf{X}}_k = \bar{\mathbf{X}}_{k,(1)} + \bar{\mathbf{X}}_{k,(2)} + \dots + \bar{\mathbf{X}}_{k,(n)} \quad (21)$$

in where $\mathbf{X}_{k,(i)}$ represents part of current state caused by the i -th element in initial state vector. When $k = 0$, we have

$$\begin{cases} \bar{\mathbf{X}}_{0,(1)} = [X_{0,(1)} \quad \mathbf{0}_{n-1 \times 1}]^T \\ \vdots \\ \bar{\mathbf{X}}_{0,(i)} = [\mathbf{0}_{i-1 \times 1} \quad X_{0,(i)} \quad \mathbf{0}_{n-i \times 1}]^T \\ \vdots \\ \bar{\mathbf{X}}_{0,(n)} = [\mathbf{0}_{n-1 \times 1} \quad X_{0,(n)}]^T \end{cases} \quad (22)$$

in where $X_{k,(i)}$ is the i -th element in $\mathbf{X}_k$.

Similarly, the input vector series $\mathbf{U}_i$ and corresponding state vector part $\bar{\mathbf{U}}_i$ are also decomposed as

$$\bar{\mathbf{U}}_k = \bar{\mathbf{U}}_{k,(1)} + \bar{\mathbf{U}}_{k,(2)} + \cdots + \bar{\mathbf{U}}_{k,(m)} \quad (23)$$

$$\mathbf{U}_k = \mathbf{U}_{k,(1)} + \mathbf{U}_{k,(2)} + \cdots + \mathbf{U}_{k,(m)} \quad (24)$$

Finally, the state transfer equation that decomposed by each element is given by

$$\begin{cases} \bar{\mathbf{X}}_{k+1,(i)} = \Phi_{k+1/k} \bar{\mathbf{X}}_{k,(i)} \\ \bar{\mathbf{U}}_{k+1,(j)} = \Phi_{k+1/k} \bar{\mathbf{U}}_{k,(j)} + \Gamma_k \bar{\mathbf{U}}_{k,(j)} \quad (\bar{\mathbf{U}}_{0,(j)} = \mathbf{0}) \\ \mathbf{X}_{k+1} = \sum_{i=1}^n \bar{\mathbf{X}}_{k+1,(i)} + \sum_{j=1}^m \bar{\mathbf{U}}_{k+1,(j)} \end{cases} \quad (i=1, 2, \dots, n; j=1, 2, \dots, m; k=0, 1, \dots, n-1) \quad (25)$$

The influence from every element in initial state vector and input series will be represented precisely according to $\bar{\mathbf{X}}_{k,(i)}$ and $\bar{\mathbf{U}}_{k,(i)}$, after updating system with Eq.(25).

3.2 Stochastic System Error distribution

When processing deterministic linear systems, the error distribution result is worked out after only once system error model updating with Eq.(25). However, the Monte-Carlo method, that needs statistics navigation errors after enough much simulation, is generally used in error distribution analysis of stochastic system.

A stochastic input linear system space state model is given by

$$\dot{\mathbf{X}} = \mathbf{F}\mathbf{X} + \mathbf{G}\mathbf{W} \quad (26)$$

in where $\mathbf{W}$ is a stochastic input vector. Similarly, define $\mathbf{X}$ is $n \times 1$ state vector, and $\mathbf{W}$ is $m \times 1$ noise vector. Its discrete form is

$$\mathbf{X}_k = \Phi_{k/k-1} \mathbf{X}_{k-1} + \Gamma_{k-1} \mathbf{W}_{k-1} \quad (27)$$

Transpose both sides of the discrete equation, we have

$$\mathbf{X}_k^T = \Phi_{k/k-1}^T \mathbf{X}_{k-1}^T + \Gamma_{k-1}^T \mathbf{W}_{k-1}^T \quad (28)$$

The equation that product Eq.(27) and (28) is given by

$$\begin{aligned} \mathbf{X}_k \mathbf{X}_k^T &= (\Phi_{k/k-1} \mathbf{X}_{k-1} + \Gamma_{k-1} \mathbf{W}_{k-1}) \cdot \\ &\quad (\mathbf{X}_{k-1}^T \Phi_{k/k-1}^T + \mathbf{W}_{k-1}^T \Gamma_{k-1}^T) \\ &= \Phi_{k/k-1} \mathbf{X}_{k-1} \mathbf{X}_{k-1}^T \Phi_{k/k-1}^T + \\ &\quad \Phi_{k/k-1} \mathbf{X}_{k-1} \mathbf{W}_{k-1}^T \Gamma_{k-1}^T + \\ &\quad \Gamma_{k-1} \mathbf{W}_{k-1} \mathbf{X}_{k-1}^T \Phi_{k/k-1}^T + \\ &\quad \Gamma_{k-1} \mathbf{W}_{k-1} \mathbf{W}_{k-1}^T \Gamma_{k-1}^T \end{aligned} \quad (29)$$

The expected number of Eq.(29) is

$$\begin{aligned} E(\mathbf{X}_k \mathbf{X}_k^T) &= \Phi_{k,k-1} E(\mathbf{X}_{k-1} \mathbf{X}_{k-1}^T) + \\ &\quad \Gamma_{k-1} E(\mathbf{w}_{k-1} \mathbf{w}_{k-1}^T) \Gamma_{k-1}^T + \\ &\quad \Gamma_{k-1} E(\mathbf{w}_{k-1} \mathbf{X}_{k-1}^T) \Phi_{k-1}^T + \\ &\quad \Phi_{k-1} E(\mathbf{X}_{k-1} \mathbf{w}_{k-1}^T) \Gamma_{k-1}^T \\ &= \Phi_{k/k-1} \mathbf{P}_{k-1} \Phi_{k/k-1}^T + \Gamma_{k-1} \mathbf{Q}_{k-1} \Gamma_{k-1}^T \end{aligned} \quad (30)$$

in where $\mathbf{P}_k$ is system error covariance matrix, $\mathbf{Q}_k$ is variance matrix of stochastic error.

At the n -th updating time, the system covariance matrix, that has been updated n times, is expanded as

$$\begin{aligned} \mathbf{P}_n &= \Phi_{n/n-1} \mathbf{P}_{n-1} \Phi_{n/n-1}^T + \Gamma_{n-1} \mathbf{Q}_{n-1} \Gamma_{n-1}^T \\ &= \prod_{i=1}^n \Phi_{i/i-1} \mathbf{P}_0 \Phi_{i/i-1}^T + \\ &\quad \sum_{j=0}^{n-2} \left(\prod_{k=j}^{n-2} \Phi_{k+2/k+1} \Gamma_k \mathbf{Q}_k \Gamma_k^T \Phi_{k+2/k+1}^T \right) + \\ &\quad \Gamma_{n-1} \mathbf{Q}_{n-1} \Gamma_{n-1}^T \end{aligned} \quad (31)$$

According to Eq.(31), the n -th covariance matrix result is only related with initial covariance matrix and the stochastic input series. Hence, if define

$$\begin{aligned} \bar{\mathbf{P}}_{k+1} &= \Phi_{k+1/k} \bar{\mathbf{P}}_k \Phi_{k+1/k}^T, \\ (\bar{\mathbf{P}}_0 = \mathbf{P}_0) &(k=0, 1, 2, \dots, n-1) \end{aligned} \quad (32a)$$

$$\begin{aligned} \bar{\mathbf{Q}}_{k+1} &= \Phi_{k+1/k} \bar{\mathbf{Q}}_k \Phi_{k+1/k}^T + \Gamma_k \mathbf{Q}_k \Gamma_k^T, \\ (\bar{\mathbf{Q}}_0 = \mathbf{0}) &(k=0, 1, 2, \dots, n-1) \end{aligned} \quad (32b)$$

Eq.31 will be rewritten as below.

$$\bar{\mathbf{P}}_n = \prod_{i=1}^n \Phi_{i/i-1} \mathbf{P}_0 \Phi_{i/i-1}^T \quad (33)$$

$$\begin{aligned} \bar{\mathbf{Q}}_n &= \sum_{j=0}^{n-2} \left(\sum_{k=j}^{n-2} \Phi_{k+2/k+1} \Gamma_k \mathbf{Q}_k \Phi_{k+2/k+1}^T \Gamma_k^T \right) + \\ &\quad \Gamma_{n-1} \mathbf{Q}_{n-1} \Gamma_{n-1}^T \end{aligned} \quad (34)$$

The above results can be summarized as follows covariance matrix updating equation in Eq.(35).

$$\begin{cases} \bar{\mathbf{P}}_{k+1} = \Phi_{k+1/k} \bar{\mathbf{P}}_k \Phi_{k+1/k}^T \\ \bar{\mathbf{Q}}_{k+1} = \Phi_{k/k-1} \bar{\mathbf{Q}}_k \Phi_{k/k-1}^T + \Gamma_k \mathbf{Q}_k \Gamma_k^T, \\ \mathbf{P}_{k+1} = \bar{\mathbf{P}}_{k+1} + \bar{\mathbf{Q}}_{k+1} \end{cases} \quad \left(\begin{matrix} \bar{\mathbf{P}}_0 = \mathbf{P}_0 \\ \bar{\mathbf{Q}}_0 = \mathbf{0} \end{matrix} \right) \quad (k=0, 1, \dots, n-1) \quad (35)$$

Similar with Eq.(21), make Eq.(35) be decomposed according to each element on diagonal of covariance matrix as Eq.(36).

$$\bar{\mathbf{P}}_k = \bar{\mathbf{P}}_{k,(1)} + \bar{\mathbf{P}}_{k,(2)} + \cdots + \bar{\mathbf{P}}_{k,(p)} \quad (36a)$$

$$\bar{Q}_k = \bar{Q}_{k,(1)} + \bar{Q}_{k,(2)} + \cdots + \bar{Q}_{k,(m)} \quad (36b)$$

Covariance matrix updating equation (35) is decomposed as:

$$\begin{cases} \bar{P}_{k+1,(i)} = \Phi_{k+1/k} \bar{P}_{k,(i)} \Phi_{k+1/k}^T \\ \bar{Q}_{k+1,(j)} = \Phi_{k/k-1} \bar{Q}_{k,(j)} \Phi_{k/k-1}^T + \Gamma_k Q_{k,(j)} \Gamma_k^T \\ P_{k+1} = \sum_{i=1}^p \bar{P}_{k+1,(i)} + \sum_{j=1}^m \bar{Q}_{k+1,(j)} \end{cases} \quad (37)$$

($i = 1, \dots, p; j = 1, \dots, m; k = 0, 1, \dots, n-1$)

After the whole update process, a group of covariance matrix $\bar{P}_{k,(1)}, \dots, \bar{P}_{k,(p)}, \bar{Q}_{k,(1)}, \dots, \bar{Q}_{k,(m)}$ represents part caused by each initial variance element and stochastic error is obtained.

4 Algorithm Evaluation

The stochastic error distribution method will be applied to analysis error transformation of Eq.(4), because the errors here must be described as variance matrix to analysis the effect from noise of gyroscope and accelerometer.

The initial matrix of P_0 is a diagonal matrix, and diagonal elements are given by

$$P_0(i, i) = X_0(i, i)^2 \quad (38)$$

in where $\cdot(i, i)$ represents the element in the i -th row and i -th column.

According to Eq.(4), P_k can be decomposed with 13 covariance matrix of initial errors and 6 covariance matrix of stochastic errors. Hence, we have

$$P_k = \sum_{i=1}^{28} \bar{P}_{k,(i)} + \sum_{j=1}^6 \bar{Q}_{k,(j)} \quad (39)$$

The correspondence between error source and serial number i and j are listed in Table 1.

Table 1: Correspondence of error source and serial number

Num.	Error source	signature
1,2,3	attitude error	ϕ_E, ϕ_N, ϕ_U
4,5	velocity error	$\delta v_E, \delta v_N, \delta v_U$
6,7	attitude error	$\delta L, \delta \lambda$
8,9,10	gyroscope scale factor error	$\delta K_{g,11}, \delta K_{g,22}, \delta K_{g,33}$
11,12,13	gyroscope mounting error	$\delta K_{g,21}, \delta K_{g,31}, \delta K_{g,32}$
14,15,16	accelerometer scale factor error	$\delta K_{g,11}, \delta K_{g,22}, \delta K_{g,33}$
17~22	accelerometer mounting error	$\delta K_{g,12}, \delta K_{g,13}, \delta K_{g,21}, \delta K_{g,23}, \delta K_{g,31}, \delta K_{g,32}$
23,24,25	gyroscope bias	$\varepsilon_x, \varepsilon_y, \varepsilon_z$
26,27,28	accelerometer bias	$\nabla_x, \nabla_y, \nabla_z$
1,2,3	gyroscope	$w_{g,x}, w_{g,y}, w_{g,z}$
4,5,6	accelerometer	$w_{a,x}, w_{a,y}, w_{a,z}$

The proposed error distribution method can easily analyze the error propagation law according to the final state covariance matrices $\bar{P}_{k,(i)}$ and $\bar{Q}_{k,(j)}$. This method is much different from conventional Monte-Carlo method, because the new method doesn't need lots of simulation and obtaining stochastic error proportion from final statistical result. This is a simple, fast and feasible error distribution method for SINS error analysis.

In the next algorithm evaluation, the error distribution result will be obtained with the proposed method as bar charts of navigation error proportion.

4.1 Test of static navigation simulation

In static condition, most parameters of system matrix F are constant values. The SINS error model will degenerate into a simple form, that the effect of each error to navigation error will be obtained directly. The simulation result of proposed method can be evaluated by comparing with the analysis based on simple form of SINS error model.

Part of the specification of SIMU(Strapdown Inertial Measurement Unit) in the simulation is shown in Table 2. And the distribution results of attitude errors, velocity errors and position errors are shown in Fig.1.

Table 2: The specification of SIMU in the simulation

Parameter	Values
Frequency of sampling	100Hz
Initial error of attitude	30'', 30'', 3'
Initial error of velocity	0.2m/s, 0.2m/s
Initial error of position	2m, 2m
Bias of gyroscope	0.01°/h
Bias of accelerometer	100μg
Scale factor error of gyroscopes	50ppm
Scale factor error of accelerometers	50ppm
Mounting error of gyroscopes	5''
Mounting error of accelerometers	5''
Random walk of angle	0.001°/√h
Random walk of velocity	1μg/√Hz

The conclusions below could be indicted from the simulation:

(1) Initial attitude error, initial velocity error and the bias errors of gyroscopes and accelerometers are primary error source. In the static condition, scale factor error and mounting error make less effect to final navigation error.

(2) The static attitude error model of SINS is given by

$$\dot{\phi} = \phi \times \omega_{ie}^n - \varepsilon^n \quad (40)$$

In Eq.(40), the attitude error ϕ is mainly produced by the initial attitude error and bias error. And this characteristic can be reflected from the attitude error distribution result.

(3) The static velocity error model of SINS is given by

$$\delta \dot{v}^n = g^n \times \phi + C_b^n \delta K_g C_n^b g^n + \nabla^n \quad (41)$$

In Eq.(41), attitude error makes gravity incorrectly project on horizontal velocities, so the initial attitude error, the bias of gyroscopes are the primary sensor error. Meanwhile, the bias of

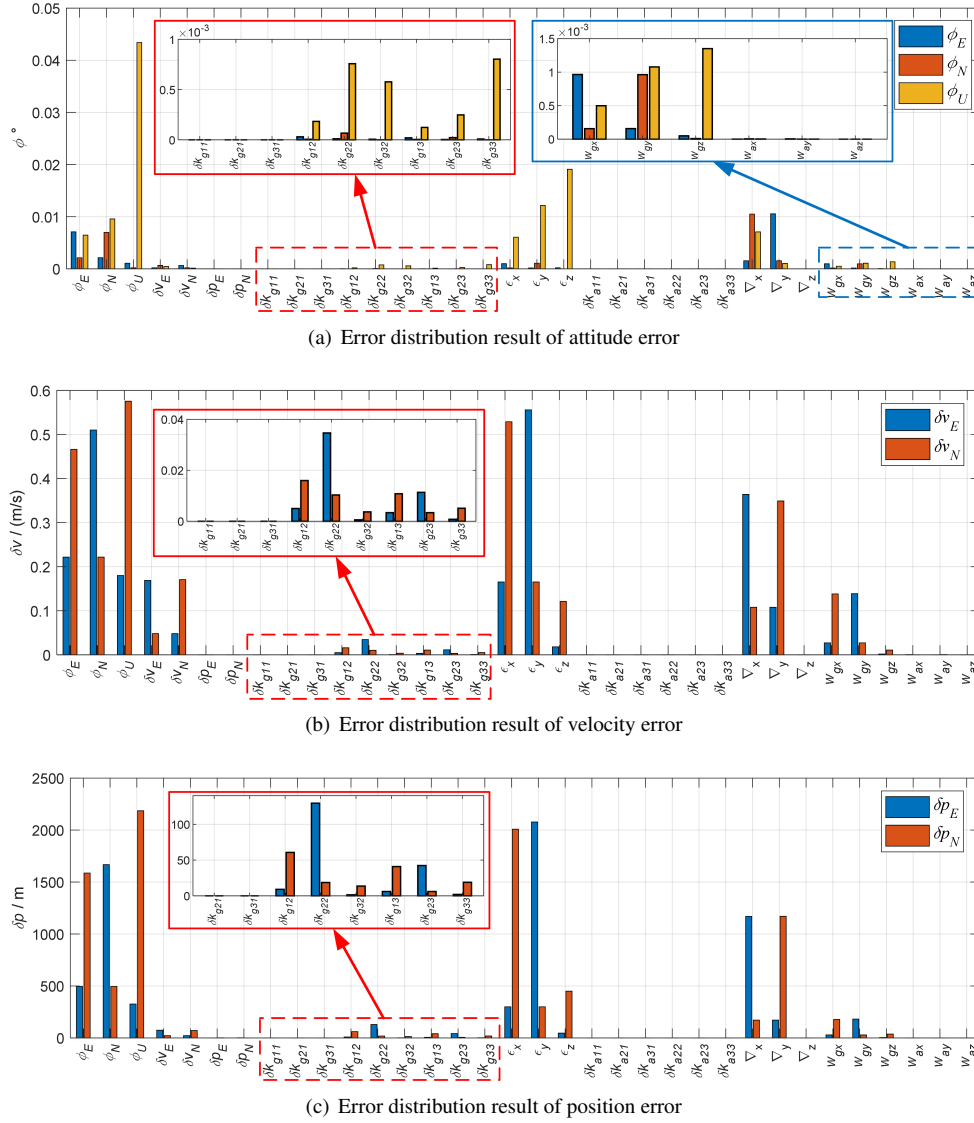


Fig. 1: Error distribution result of simulation in static condition

accelerometers effect horizontal velocity errors directly, and they also have high percent in velocity error. What indicted from velocity error distribution result is the same as the analysis from Eq.(41).

(4) The static position error model of SINS is given by

$$\begin{cases} \delta \dot{L} = \frac{1}{R_M + h} \delta v_N \\ \delta \dot{\lambda} = \frac{\sec L \delta v_E}{R_N + h} \end{cases} \quad (42)$$

It is clear that position error distribution result will be much similar with velocity error. The velocity error distribution result and position error distribution result have same error proportion distribution in Fig.1.

4.2 Test of single axis rotation simulation

To compare with the navigation error distribution result of the static test, another error distribution test was finished in

the single axis rotation condition with repeated clockwise and anti-clockwise turn. In this motion, the angular rate and yaw curve is in Fig.2. Rotating about z-axis can restrain the navigation error caused by gyroscope bias and accelerometer bias[2]. Comparing the error distribution result and the theoretical performance restraining navigation error of rotation INS could be used to verify the proposed analysis method.

The conclusions below could be indicted from the simulation:

(1) According to the result of Fig.3, the influence of horizontal gyroscope bias and accelerometer bias to horizontal attitude error is restrained observably. But the yaw error is almost the same as the static condition. It is in accordance with the regulation of the rotation INS about z-axis.

(2) In the error distribution result of velocity error, horizontal gyroscope bias and accelerometer bias is restrained, however the velocity error caused by scale factor error and mount-

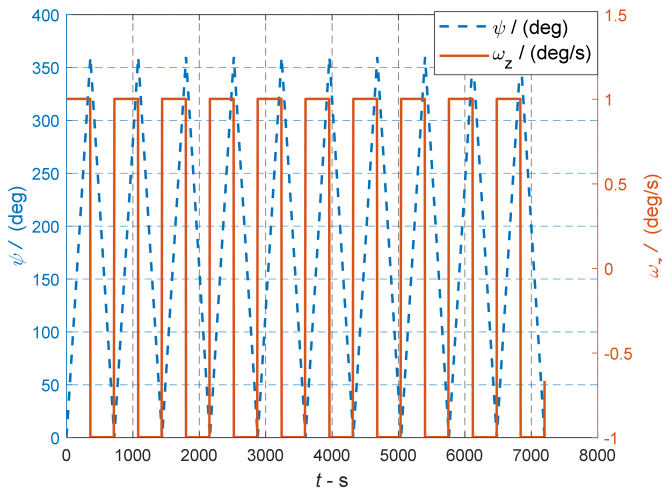


Fig. 2: Angular rate and yaw in single axis rotation simulation

ing error of z-axis is enhanced, because the additional rotation about z-axis excites the scale factor error and mounting error.

(3) The error distribution result of rotation INS simulation is correct and in accordance with the error transfer rule of rotation INS. The proposed error distribution analysis method is useful to assist design and optimize the INS.

5 Conclusion


After a state space model constructed according to SINS error model, the state vector decomposition of deterministic error is extended to the covariance matrix decomposition with random error, and the decomposed covariance contains error distribution information. Thus, the error distribution of SINS is calculated by updating decomposed covariance matrix with typical trajectory data.

The method of error distribution analysis based on covariance decomposition presented herein can be applied to the design or pre-research stage of SINS. An error distribution table for multiple error sources can be obtained without any practical test. In the following research stage, the accuracy of SINS can be improved quickly and effectively by optimizing the primary error sources. Therefore, the proposed method has great practical meaning in engineering.


References

- [1] G. Ding, W. Zhou, and G. Cui. Study on error modeling methods of strap-down INS and their relations. In *2nd International Conference on Information and Computing Science*, pages 341–344, 2009.
- [2] S. Du, W. Sun, and Y. Gao. MEMS IMU error mitigation using rotation modulation technique. *Sensors*, 16, 2016.
- [3] S. Poddar, V. Kumar, and A. Kumar. A comprehensive overview of inertial sensor calibration techniques. *Journal of Dynamic Systems, Measurement and Control, Transactions of the ASME*, 139:1–11, 2017.
- [4] P. Srinivas and A. Kumar. Overview of architecture for GPS-INS integration. In *2017 Recent Developments in Control, Automation and Power Engineering*, pages 433–438, Noida, India, 2018.


- [5] L. Zhang, X. Xie, D. Li, and Y. Wang. Error analysis of strap-down inertia navigation system in tactical missiles. *Procedia Engineering*, 15:1456–1460, 2011.
- [6] E. Petritoli and F. Leccese. Navigation equations, uncertainty and error budget in inertial navigation systems. *IEEE International Workshop on Metrology for AeroSpace, MetroAeroSpace*, 1:376–380, 2021.
- [7] J. Kwon and C. Jekeli. Gravity requirements for compensation of ultra-precise inertial navigation. *Journal of Navigation*, 58:479–492, sep 2005.
- [8] P. G. Savage. *Strapdown Analytics*, volume 2. Strapdown Associates, Inc., Minnesota, 2000.
- [9] J. Weng, Y. Qin, G. Yan, and C. Mei. Analysis method on error distributions of in-flight alignment schemes. *Journal of Chinese Inertial Technology*, 23:570–574, 2015.
- [10] G. Yan, X. Yang, X. Su, J. Weng, and Y. Qin. Error distribution method and analysis of observability degree based on the covariances in kalman filter. In *Chinese Control Conference*, pages 4900–4905, Wuhan, China, 2018.

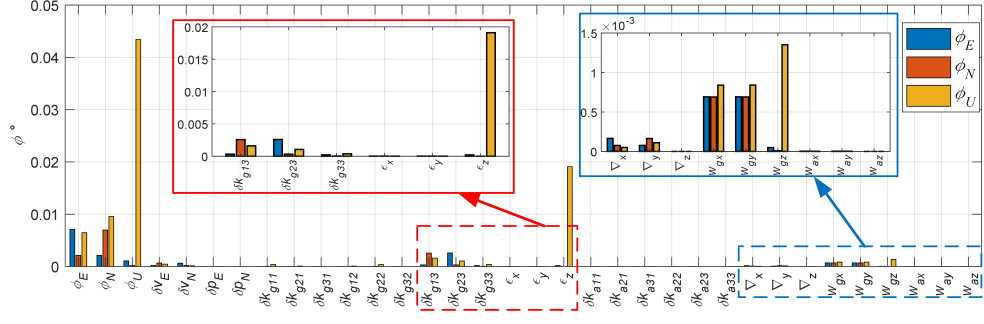

(a) Error distribution result of attitude error

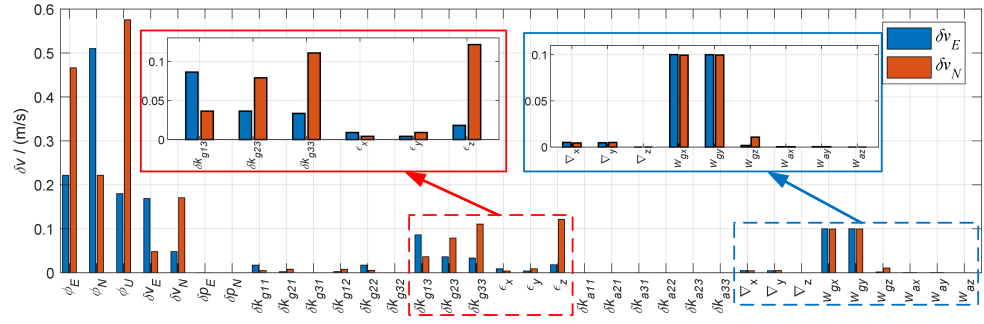

(b) Error distribution result of velocity error

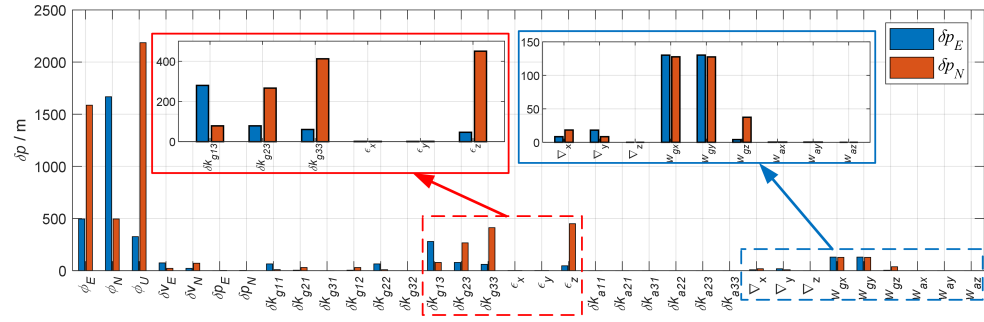

(c) Error distribution result of position error

Fig. 3: Error distribution result of simulation in single axis rotation condition